

PAVING

made easy with

PAVE SET

DRYPAK®

It's as easy as ABC...



Adelaide Brighton Cement Ltd




Required Tools & Materials

- DryPak Pave Set
- Bedding sand
- Pavers
- 2 x wooden rails
- String
- Shovel
- Broom
- Wooden stakes
- Tape measure
- Rake
- Base coarse material (quarry rubble)
- Screeding rail or heavy wooden plank
- Rubber mallet and board or plate compactor
- DryPak General Purpose Concrete
- Blower for cleaning pavers (e.g. leaf blower)

Setting Up

- It is vital to prepare the area properly to achieve a professional result.
- Dig out the area to be paved to the depth of your pavers *plus* 30mm for the bedding sand.
- If the underlying soil is not firm (or has a high clay content) you will need to dig a further 50mm to allow for a base of coarse material such as quarry rubble.
- Place string lines around the area to be paved, then slope them away from nearby structures to allow for water run-off (a drop of 20mm for every metre of pavers is recommended).
- If necessary lay the base of coarse material and compact to a depth of 50mm using the rubber mallet and board (or plate compactor)
- Spread the bedding sand over the area evenly with the rake to a depth of about 40mm. **DO NOT** use beach sand or fine sand.
- Place the wooden rails along the sides of the area and level the bedding sand with the screeding rail.

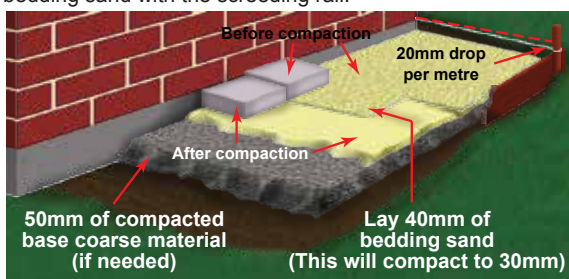

www.drypak.com.au

